

# Owner's Manual

Please read before using this unit.

## DVD/CD Player with Video Cassette Recorder DVC865H

# SYLVANIA

 
INSTRUCCIONES EN  
ESPAÑOL INCLUIDAS.

### Supplied Accessories



Remote control  
(NB606UD / NB656UD)  
with two AA batteries



Audio/Video cables  
(WPZ0102TM015 /  
WPZ0102LTE01)



Owner's Manual  
(1VMN23354)

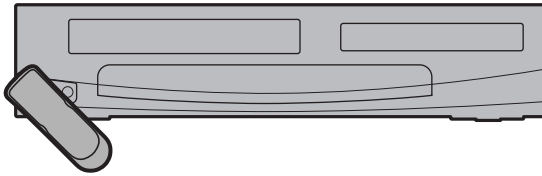 

If you need additional operating assistance after reading this owner's manual, please call  
**TOLL FREE : 1-800-968-3429**  
or visit our Web site at  
<http://www.SylvaniaConsumerElectronics.com>

### Table of Contents

#### Precautions

Laser Safety.....	2
■ <b>Important Safeguards</b> .....	<b>3</b>
Location and Handling.....	4
Avoid the Hazards of Electrical Shock and Fire.....	4
Moisture Condensation Warning.....	4
About Copyright.....	4
Notice for Progressive Scan Outputs.....	4
Symbols Used in This Manual.....	4
Maintenance.....	4
■ <b>About Video Cassettes and Discs</b> .....	<b>5</b>
Playable Video Cassettes.....	5
Playable Discs.....	5
Unplayable Discs.....	5

#### Setup

■ <b>Connections</b> .....	<b>6</b>
Connection to a TV.....	6
Connection to an Audio System.....	7
Connection to a Satellite or Cable Box.....	7
■ <b>Preparation for Use</b> .....	<b>8</b>
Turning on Unit for the First Time.....	8
Clock Setup.....	8
■ <b>Function Overview</b> .....	<b>9</b>
Front Panel Indicator Lights.....	9
Selecting DVD or VCR Operation.....	9
Front & Rear Terminals.....	9
Remote Control.....	10
Installing the Batteries for the Remote Control.....	10

#### VCR Functions

■ <b>Playback</b> .....	<b>11</b>
When You Playback a Tape Recorded in HiFi Stereo.....	11
■ <b>Other Operations</b> .....	<b>11</b>
Index Search.....	11
Time Search.....	11
Auto Repeat.....	12

■ <b>Recording</b> .....	<b>12</b>
Recording & OTR (One Touch Recording).....	12
Timer Recording.....	12
Hints for OTR and Timer Recording.....	13
Satellite Link.....	14
Copying a Videotape.....	14


#### DVD Functions

■ <b>Playback</b> .....	<b>15</b>
■ <b>MP3 Playback</b> .....	<b>16</b>
■ <b>On-Screen Display</b> .....	<b>16</b>
■ <b>Search Functions</b> .....	<b>17</b>
Using Track Search.....	17
Using Title / Chapter Search.....	17
Using Time Search.....	17
Marker Setup.....	17
■ <b>Repeat / Random / Programmed Playback</b> .....	<b>18</b>
Repeat Playback / Repeat A-B Playback.....	18
Random Playback / Programmed Playback.....	18
■ <b>Special Settings</b> .....	<b>19</b>
Subtitle Language / Audio Language.....	19
Camera Angle / Black Level Setting.....	19
Stereo Sound Mode / Virtual Surround.....	19
■ <b>DVD Setup</b> .....	<b>20</b>
LANGUAGE Setting.....	20
DISPLAY Setting.....	21
AUDIO Setting.....	21
PARENTAL Setting.....	22
OTHERS Settings.....	22
Reset to the Default Setting (Except for PARENTAL Setting).....	23

#### Information

■ <b>Troubleshooting Guide</b> .....	<b>23</b>
■ <b>Specifications</b> .....	<b>24</b>
■ <b>Limited Warranty</b> .....	<b>24</b>
■ <b>Español</b> .....	<b>25</b>
■ <b>Quick Use Guide</b> .....	<b>27</b>

### Basic TV Connection

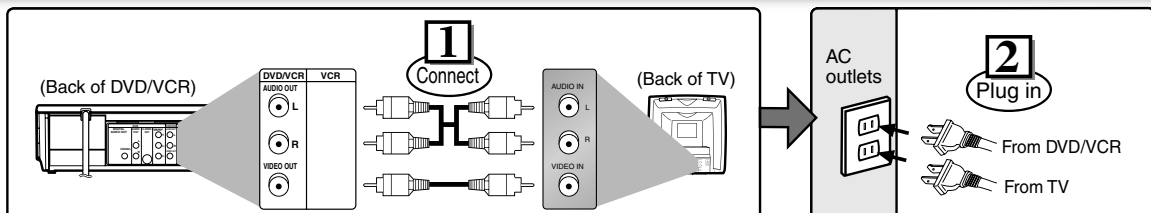

**3** Please refer to "Connections" on page 6.

# Precautions

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**CAUTION:**  
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The caution marking is located on the rear of the cabinet.

## Laser Safety

This unit employs a laser. Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.

**CAUTION:** USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**CAUTION:** VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. DO NOT STARE INTO BEAM.

**LOCATION:** INSIDE, NEAR THE DECK MECHANISM.

**FCC WARNING - This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.**

## RADIO-TV INTERFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

**This Class B digital apparatus complies with Canadian ICES-003.**

**Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

**ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.**

## A NOTE ABOUT RECYCLING

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

## Make your contribution to the environment!!!

- Used up batteries do not belong in the dust bin.
- You can dispose of them at a collection point for used up batteries or special wastes. Contact your council for details.



For Customer Use:

Read carefully the information located at the back of this unit and enter below the Model No. and the Serial No. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# IMPORTANT SAFEGUARDS

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions- The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.  
**EXCEPTION:** A product that is meant for uninterrupted service and, that for some specific reason, such as the possibility of the loss of an authorization code for a CATV converter, is not intended to be unplugged by the user for cleaning or any other purpose, may exclude the reference to unplugging the appliance in the cleaning description otherwise required in item 5.
6. Attachments - Do not use attachments not recommended by the video product manufacturer as they may cause hazards.
7. Water and Moisture- Do not use this video product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. Accessories - Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
9. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. Power Sources - This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
11. Grounding or Polarization - This video product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. Lightning - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power-line surges.
14. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
15. Overloading - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
16. Object and Liquid Entry - Never push objects of any kind into this video product through any openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.
17. Servicing - Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Damage Requiring Service - Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a. When the power-supply cord or plug is damaged.
  - b. If liquid has been spilled, or objects have fallen into the video product.
  - c. If the video product has been exposed to rain or water.
  - d. If the video product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.
  - e. If the video product has been dropped or damaged in any way.
  - f. When the video product exhibits a distinct change in performance this indicates a need for service.
19. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
20. Safety Check - Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.
21. Heat - This video product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.



## Location and Handling

- Do not stand this unit up vertically. Install this unit in a horizontal and stable position. Do not place anything directly on top of this unit. Do not place this unit directly on top of the TV.
- Depending on the TV, noise or disturbance of the picture and/or sound may be generated if this unit is placed too close to your TV. In this case, please ensure enough space between your TV and this unit.
- Do not cover or place this unit in enclosed spaces to prevent excessive temperature build up.
- Do not place this unit in direct sunlight, or near heat sources.
- Depending on the environment, the temperature of this unit may increase slightly. This is not a malfunction.
- Keep this unit away from strong magnetic objects.
- Do not place any object containing water or other liquids on this unit. In the event that liquid should enter the cabinet, unplug this unit immediately and contact the retailer or an Authorized Service Center immediately.
- Do not remove this unit cabinet. Touching parts inside the cabinet could result in electric shock and/or damage to this unit. For service and adjustment inside the cabinet, call a qualified dealer or an Authorized Service Center.
- Be sure to remove disc and video tape and unplug the AC power cord from the output before carrying this unit.

## Avoid the Hazards of Electrical Shock and Fire

- Do not handle the power cord with wet hands.
- Do not pull on the power cord when disconnecting it from AC wall outlet. Grasp it by the plug.
- If, by accident, water is spilled on this unit, unplug the power cord immediately and take the unit to our Authorized Service Center for servicing.
- Do not put your fingers or objects into the unit cassette holder.

## Moisture Condensation Warning

Moisture may form inside this unit under the following conditions:

- Immediately after a heater is turned on.
- In a steamy or humid room.
- When this unit is suddenly moved from a cold to warm environment.

If moisture forms inside this unit, it may not operate properly or damage the video tape. In such case, turn on the power and wait for more than 2 hours for the moisture to evaporate.

## About Copyright

Unauthorized copying, broadcasting, public performance and lending of discs are prohibited.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

## Notice for Progressive Scan Outputs

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of picture problems with 525 progressive scan output, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding your TV set compatibility with this 525p DVD player, please contact our customer service center.

## Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground should be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Symbols Used in This Manual

The following symbols appear in some headings in this manual.



: Description refers to playback or recording of video cassette tapes.



: Description refers to playback of DVD-Video discs.



: Description refers to playback of Audio CDs.



: Description refers to playback of MP3 files.

## Maintenance

### SERVICING

- Please refer to relevant topics on the "Troubleshooting Guide" on page 23 before returning the product.
- If this unit becomes inoperative, do not try to correct the problem by yourself. There are no user-serviceable parts inside. Turn off, unplug the power plug, and please call our toll free customer support line found on the cover of this manual to locate an Authorized Service Center.

### CLEANING THE CABINET

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasive.

### CLEANING DISCS

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center to out. Do not wipe in a circular motion.
- Do not use solvents such as benzene, thinner, commercially available cleaners, detergent, abrasive cleaning agents or antistatic spray intended for analog records.

### CLEANING THE DISC LENS

- If this unit continues to perform improperly even after you have referred to the relevant sections and to the "Troubleshooting Guide" in this Owner's Manual, the laser optical pickup unit may be dirty. Consult your dealer or an Authorized Service Center for inspection and cleaning of the laser optical pickup unit.

### DISC HANDLING

- When you handle a disc, hold it by its edge and try not to touch the surface of the disc.
- Always store the disc in its protective case when not in use.

### AUTO HEAD CLEANING

- Automatically cleans video heads as you insert or remove a cassette, so you can see a clear picture.
- Playback picture may become blurred or interrupted while the TV program reception is clear. Dirt accumulated on the video heads after a long period of use, or the usage of rental or worn tapes can cause this problem. If a streaky or snowy picture appears during playback, the video heads in your unit may need to be cleaned.
  1. Please visit your local Audio/Video store and purchase a good quality VHS Video Head Cleaner.
  2. If a Video Head Cleaner does not solve the problem, please call our toll free customer support line found on the cover of this manual to locate an Authorized Service Center.

### Hint

- Remember to read the instructions along with the video head cleaner before use.
- Clean video heads only when problems occur.




 





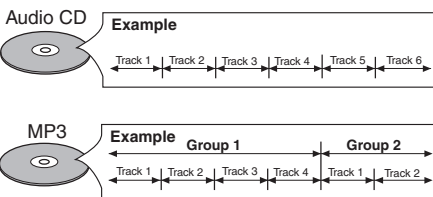




Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.


# About Video Cassettes and Discs

## Playable Video Cassettes

Use only cassettes marked  with this unit.

## Playable Discs

Playable discs	Mark (logo)	Region code	Recorded signals	Disc size	Disc types
DVD-Video *1, 2, 3, 5, 9		 or 	Digital video (MPEG2)	12 cm or 8 cm	
DVD-RW DVD-R *1, 3, 4, 5, 6, 8, 9, 10	 	—			
DVD+RW DVD+R *1, 3, 4, 5, 7, 8, 9, 10	 	—			
Audio CD *3, 5, 9		—	Digital audio or MP3	12 cm or 8 cm	
CD-RW CD-R *3, 4, 5, 8, 9	   	—			

 is a trademark of DVD Format/Logo Licensing Corporation.

### If you cannot play back a disc which bears one of the marks above, check the following.

- \*1: This unit conforms to the NTSC color system. Discs recorded in other color systems such as PAL cannot be played back.
- \*2: Certain DVD-Video discs do not operate as described in this manual due to the intentions of the disc's producers.
- \*3: Scratched or stained discs may not be played back.
- \*4: Some discs cannot be played back because of incompatible recording conditions, characteristics of the recorder or special properties of discs.
- \*5: You can play back discs which bear the marks above. If you use nonstandardized discs, this unit may not play them back. Even if they are played back, the sound or video quality will be compromised.
- \*6: You may play back the unfinalized DVD-RW/R disc recorded in the video format on our brand's DVD recorder. However, depending on the recording status of a disc, the disc may not be played back at all or normally (the picture or sound may not be smooth, etc.). In this case, you need to finalize the disc with the DVD recorder. Refer to the manual accompanying the DVD recorder.
- \*7: Only discs recorded in the video format and finalized can be played back. Unfinalized discs cannot be played back. Depending on the recording status of a disc, the disc may not be played back at all (the picture or sound may not be smooth, etc.).
- \*8: If the recorded portion of the disc is too small (less than 2 3/16 inches (55 mm) across), it may not play back properly.
- \*9: Do not glue paper or put stickers on to the disc. These may damage the disc, and the unit may not read it correctly.
- \*10: Discs Recorded in the VR (Video Recording) format cannot be played back.

## Unplayable Discs

### NEVER play the following discs as malfunction may result!

DVD-RAM / DVD-Audio / CD-i / Photo CD / Video CD / DVD with region codes other than 1 or ALL / DTS-CD / DVD-ROM for personal computers / CD-ROM for personal computers

### On the following disc, the sound MAY NOT be heard.

Super Audio CD

**NOTE:** Only the sound recorded on the normal CD layer can be delivered.

The sound recorded on the high density Super Audio CD layer cannot be delivered.

### Any other discs without compatibility indications

# Setup

## Connections

### Connection to a TV

Please refer to "Basic TV Connection" on the front page before you use this unit.

#### VCR and Basic DVD Connection

#### Available for DVD only


#### DVD's Picture quality

#### Basic Audio

#### Basic Picture

#### Good Picture

#### Best Picture

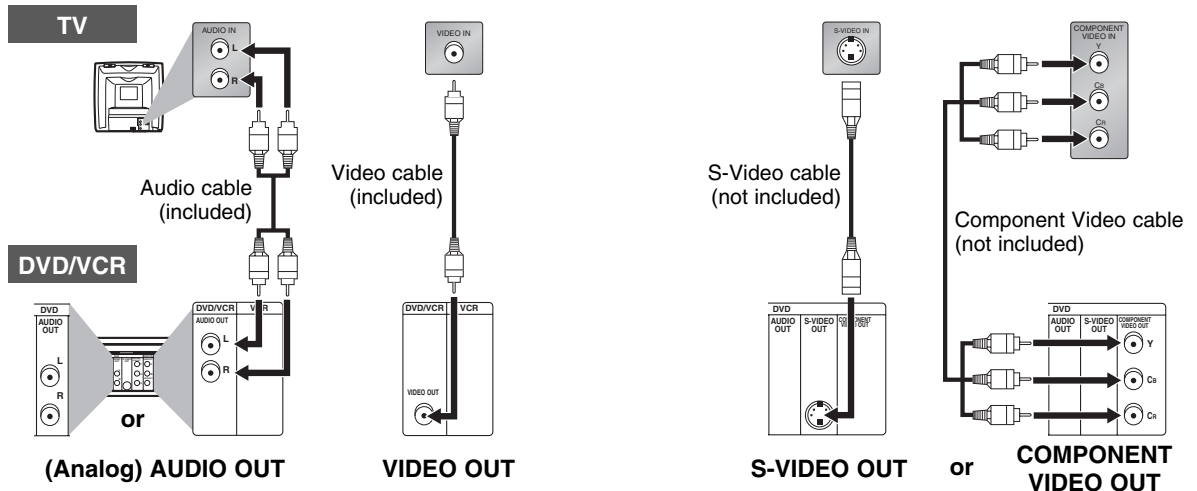

#### Hint

- Connect this unit directly to the TV. If the Audio/Video cables are connected to a VCR, pictures may be distorted due to the copy protection system.
- The COAXIAL, DVD AUDIO OUT, S-VIDEO OUT and COMPONENT VIDEO OUT jacks are only useful in DVD mode.

#### If your TV is compatible with 525 progressive scanning and you want to enjoy that high quality picture;

You must select the connection Method 3 above and progressive scanning mode. To set the mode, set "PROGRESSIVE" to "ON" in the SETUP menu, so that the PROGRESSIVE SCAN indicator on the front panel lights on. See pages 20 to 21 for more details.

- When "PROGRESSIVE" is "ON", video signals from the unit's VIDEO OUT and S-VIDEO OUT jacks will be distorted or not be output at all.

#### If your TV is not compatible with progressive scanning;

Use this unit in interlace mode and set "PROGRESSIVE" to "OFF" either in the SETUP menu or by pressing and holding [PLAY ►] on the front of the unit for more than 5 seconds, so that the PROGRESSIVE SCAN indicator on the front panel lights off.

#### After connecting to your TV:

You will need to switch to video input on your TV. This is usually marked TV/VIDEO, INPUT or AUX. Please refer to your TV owner's manual for details.

#### INPUT MODES FOR COMMON TV BRANDS

Listed below are inputs for common brand name TV's.

 
Admiral:	AUX	Panasonic:	TV/VIDEO
Curtis Mathis:	LINE1, LINE2, 00, 90, 91, 92, 93	RCA:	INPUT, TV/VCR, 00, 90, 91, 92, 93
GE:	INPUT, TV/VCR, 00, 90, 91, 92, 93	Samsung:	TV/VIDEO
Hitachi:	INPUT, AUX	Sanyo:	VIDEO
JVC:	VIDEO, VIDEO1, VIDEO2, VIDEO3	Sharp:	00
Kenwood:	AUX	Sony:	VIDEO1, VIDEO2, VIDEO3
LXI-Series:	00	Toshiba:	TV/GAME
Magnavox:	AUX CHANNEL	Zenith:	00

## Connection to an Audio System


### Playing 2 Channel Audio

#### Audio

##### Stereo system



Audio cable  
(included)

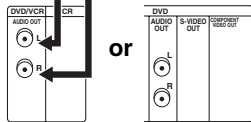


(Analog) AUDIO OUT

### Playing Dolby Digital (5.1 channel audio)

##### Dolby Digital decoder, MD deck or DAT deck



Audio Coaxial Digital cable  
(not included)

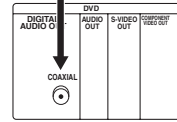

DIGITAL AUDIO OUT

	SETUP > QUICK > DOLBY DIGITAL
Connecting to a Dolby Digital decoder for Dolby Digital audio output.	BITSTREAM
Connecting to other equipment (an MD deck or DAT deck etc.) without Dolby Digital decoder.	PCM

\* To complete these settings, refer to pages 20-21.

#### Hint

 
- The audio source on a disc in a Dolby Digital Multi channel surround format cannot be recorded as digital sound by an MD or DAT deck.
- By hooking this unit up to a Multi channel Dolby Digital decoder, you can enjoy high-quality Dolby Digital Multi channel surround sound as heard in the movie theaters.
- Playing a DVD using incorrect settings may generate noise distortion and may also damage the speakers.

## Connection to a Satellite or Cable Box



#### Back of TV



#### Back of DVD/VCR



#### External tuner (Satellite Box or Cable Box)

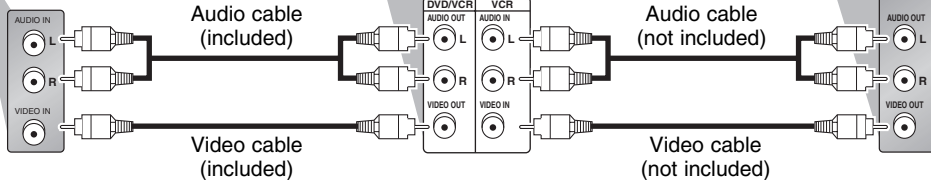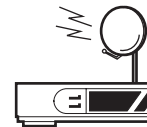

### Using your Recorder with a Satellite or Cable Box

1. Connect the audio and video cables to the audio and video out jacks of your satellite or cable box and to the audio and video in jacks at the back of your recorder.
  2. Press **[INPUT SELECT]** on your remote control until L1 is displayed on your TV.
  3. On your satellite or cable box, select the channel you want to view or record only through L1. If you connect to the L2, you cannot use cable box or satellite box.
- L1 or L2 refers to rear or front input jacks. L1 activates rear input jacks, L2 activates front input jacks.

### Special Note When Connected to a Satellite or Cable Box:

Only the active channel on your satellite or cable box may be viewed or recorded when connected to your DVD/VCR recorder. Do not change channels during a recording. You cannot record on one channel while viewing another.

# Preparation for Use

## Turning on Unit for the First Time



 
 
Please note: most instructions in this manual refer to remote control use.

- 1 Be sure your TV's input is set to VIDEO (name may vary with TV manufacturer. See your TV manual for details.)




- 2 Press [▲/▼] to select your on-screen menu language, then press [▶] to continue.

POWER




 - 3 When "CLOCK SET" appears, go to step 2 in "Clock Setup" on this page.




## To Change the Selected Menu Language

 
- 1 Press [SETUP] until the main menu appears.



 - 2 Select "LANGUAGE SELECT", Then press [▶] to go to next step.



 - 3 Select "ENGLISH", "FRANCAIS" or "ESPAÑOL", then press [CLEAR/C.RESET].




### Hint

- If you accidentally select Spanish or French and need English: Press [SETUP] and choose SELEC. IDIOMA or SELECTION LANGUE. Press [▶] and select ENGLISH. Finally, press [CLEAR/C.RESET].

## Clock Setup




 - 1 Press [SETUP] and select "CLOCK SET". Then press [▶] to go to next step.




- If the clock is not set, the CLOCK SET screen appears when you press [SETUP]. In this case, go to step 2.

 
- 2 Select the current month. Then press [▶] to go to next step.



 
- 3 Select the current day. Then press [▶] to go to next step.



 
- 4 Select the current year. Then press [▶] to go to next step.




 
- 5 Select the current hour. Then press [▶] to go to next step.



 - 6 Select the current minute. Then press [▶] to go to next step.



- 7 Select "AM" or "PM".

  

- 8 To exit the CLOCK SET screen




### Hint

- To go back, press [◀] (during steps 2 to 7).
- Clock setting will be lost after a power failure or this unit has been unplugged for more than 30 seconds.

# Function Overview

## Front Panel Indicator Lights

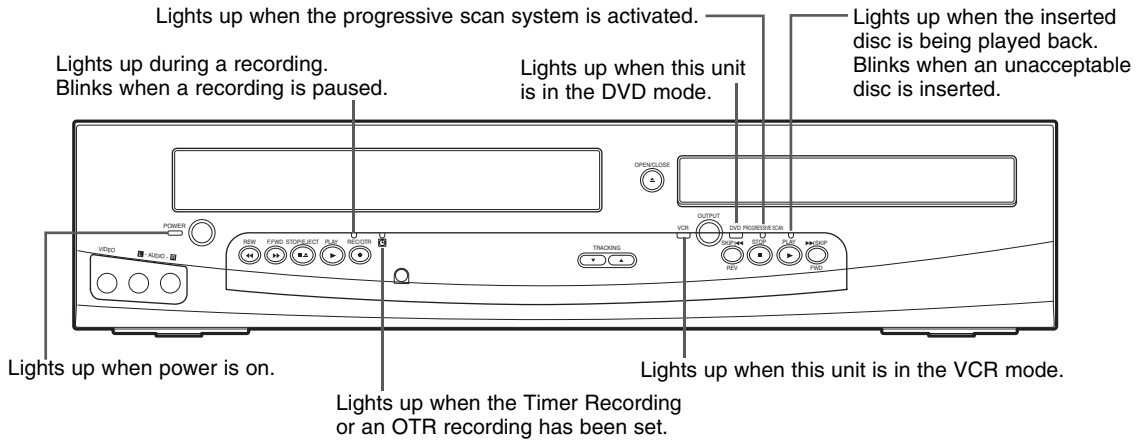

## Selecting DVD or VCR Operation


You must first select either DVD or VCR operation.

### VCR MODE

Press **[VCR]** on the remote control.  
(The VCR OUTPUT light will illuminate.)


### DVD MODE

Press **[DVD]** on the remote control.  
(The DVD OUTPUT light will illuminate.)

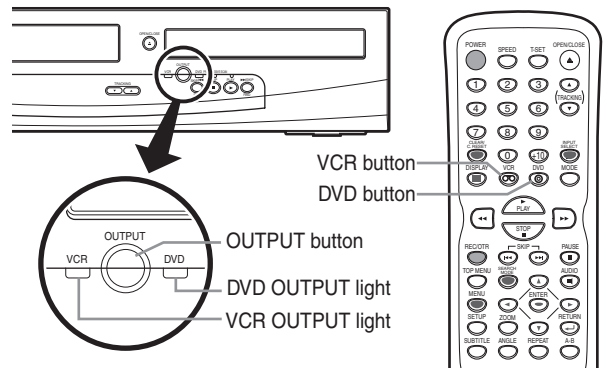


## Front & Rear Terminals

[Rear Panel]

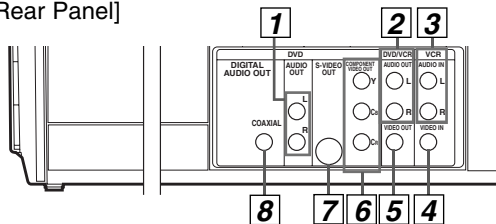

[Front Panel]

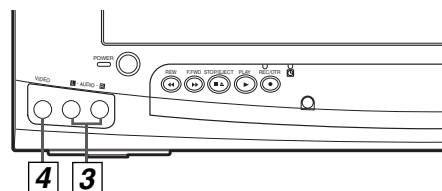

### 1: DVD AUDIO OUT\* (analog) Jacks

Connect an audio cable from here to the AUDIO IN jack of your television or audio equipment. (cable included)

### 2: DVD/VCR AUDIO OUT Jacks

Connect an audio cable from here to the AUDIO IN jack of your television or audio equipment. Standard connection for DVD/VCR use. (cable included)

### 3: AUDIO IN Jacks

Connect a stereo audio cable from the AUDIO OUT jacks of a camcorder, VCR, etc. to here. After making the connection, press **[INPUT SELECT]** on your remote control. Select L1 to activate the rear AUDIO IN jack, or L2 to activate the front.

### 4: VIDEO IN Jack

Connect a video cable from the VIDEO OUT jack of a camcorder, VCR, etc. to here. After making the connection, press **[INPUT SELECT]** on your remote control. Select L1 to activate the rear VIDEO IN jacks, or L2 to activate the front.

### 5: DVD/VCR VIDEO OUT Jack

Connect a video cable from here to the VIDEO IN jack of your television or audio equipment. Standard connection for DVD/VCR use. (cable included)

### 6: COMPONENT VIDEO OUT\* Jacks

Connect component video cables from here to the COMPONENT VIDEO IN jacks of your television. (cable not included)

### 7: S-VIDEO OUT\* Jack

Connect an S-Video cable from to the S-VIDEO IN jack of your television. (cable not included)

### 8: DIGITAL AUDIO OUT COAXIAL\* Jack


Connect a digital audio coaxial cable from here to the DIGITAL AUDIO IN jack of a digital audio receiver. (cable not included)

\* For enhanced DVD viewing. DVD/VCR video and audio connection required to view video cassettes.

### Hint

• Audio and video cables are included for both VCR and DVD viewing. You can enhance your DVD picture and sound quality with a variety of special audio and video cables, which are sold separately.

## Remote Control

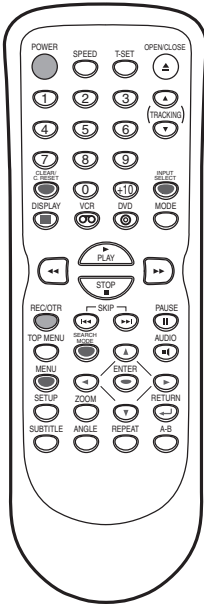


### Installing the Batteries for the Remote Control

Install two AA batteries (supplied) matching the ++/-- indicated inside battery compartment of the remote control.



Keep in mind the following when using the remote control:

- Make sure that there are no obstacles between the remote control and the remote sensor on the unit.
- The maximum operable ranges from the unit are as follows.
  - **Line of sight:** approx. 23 feet (7m)
  - **Either side of center:** approx. 16 feet (5m) within 30°
  - **Above:** approx. 16 feet (5m) within 15°
  - **Below:** approx. 10 feet (3m) within 30°

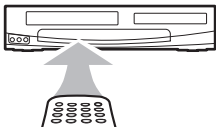

### Hint

- Do not mix alkaline and manganese batteries.
- Do not mix old and new batteries.
- If you turn off this unit, you cannot operate [OPEN/CLOSE ▲] by remote control. Be sure to use [OPEN/CLOSE ▲] or [STOP/EJECT ■▲] on the unit.

Disc/Tape	DVD mode		VCR mode
	DVD	CD MP3	VHS
Button (Alphabetical order)			
① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪ ⑫	•To select chapter or title directly.	•To select track directly.	—
⏮ ⏭	•To search forward/backward through a disc. •To begin slow forward/reverse playback in the pause mode.	•To search forward/backward through a disc.	•To forward/backward a tape.
A-B	•To repeat between your chosen point of A and B.	•To repeat between your chosen point of A and B. (CD)	—
ANGLE	•To select camera angles on a disc.	—	—
AUDIO	•To select audio languages on a disc.	•To select STEREO, L-ch or R-ch. (CD)	•To select the HI-FI or MONO mode during playback at only HI-FI tape.
CLEAR C. RESET	•To clear the markers. •To clear numbers entered incorrectly. •To cancel the point for A-B repeat.	•To clear the markers. (CD) •To remove status number in program input. •To clear numbers entered incorrectly. •To cancel the point for A-B repeat. (CD)	•To exit the VCR Menu. •To reset the tape counter.
DISPLAY	•To display the current disc mode.	•To display the current disc mode.	•To display the current time, tape counter, and L1 or L2.
DVD	•To select DVD output mode. •To activate DVD mode.	•To select the DVD output mode. •To activate DVD mode.	—
⏪ ENTER ⏩	•To move the cursor and determine its position.	•To move the cursor and determine its position.	•To select an item on the VCR Menu. •To advance to the next VCR Menu. •To go back one step during clock and timer setting.
INPUT SELECT	—	—	•To select input L1 or L2.
MENU	•To call up the Menu on a disc.	•To call up the file list. (MP3)	—
MODE	•To set black level on/off. •To set virtual surround on/off.	•To arrange the playing order or play randomly. •To set virtual surround on/off.	—
OPEN/CLOSE	•To open or close the disc tray.	•To open or close the disc tray.	•To eject the video cassette from the VCR.
PAUSE	•To pause disc playback. •To advance playback one frame at a time.	•To pause disc playback.	•To pause tape playback or recording. •To advance playback one frame at a time.
▶ PLAY	•To begin disc playback.	•To begin disc playback.	•To begin tape playback.
POWER	•To turn the unit on/off.	•To turn the unit on/off.	•To turn the unit on/off.
REC/OVR	—	—	•To start recording or One Touch Recording.
REPEAT	•To play a chapter or title repeatedly.	•To play a track or disc repeatedly. (CD) •To play a track, group or disc repeatedly. (MP3)	•To select the repeat mode on or off.
RETURN	•To return to the previous operation in menu.	•To return to the previous operation in menu.	—
SEARCH MODE	•To search chapter, title or time. •To set or search the markers.	•To search track. •To search time. (CD) •To set or search the markers. (CD)	•To call up the index or time search menu.
SETUP	•To call up the DVD setup menu.	•To call up the DVD setup menu.	•To call up the VCR Menu.
SKIP	•To skip chapters or titles.	•To skip tracks.	—
SPEED	—	—	•To select the recording speed.
STOP	•To stop playback.	•To stop playback.	•To stop playback or recording.
SUBTITLE	•To select subtitles on a disc.	—	—
TOP MENU	•To call up the Top Menu on a disc.	•To return to the top file of the highest hierarchy in the program and file list. (MP3)	—
TRACKING TRACKING	—	—	•To adjust the tracking manually during playback.
T-SET	—	—	•To put the VCR into standby mode for a Timer Recording.
VCR	—	—	•To select the VCR output mode. •To activate VCR mode.
ZOOM	•To magnify part of a picture. (x2/x4)	—	—


# VCR Functions

## Playback

Before: Turn on the TV.



<b>1</b> Insert a video cassette into this unit. 	<b>2</b> To start playback 
<b>3</b> To stop playback 	<b>4</b> To eject the cassette 

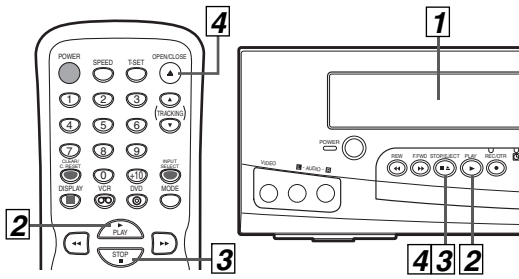

### Hint

- When a tape without a record tab is inserted, the unit will start playback automatically.
- Tracking will be automatically adjusted upon playback. To adjust the tracking manually, press [TRACKING ▲/▼] (or [TRACKING ▼/▲] on the front panel) during playback.

### When You Playback a Tape Recorded in HiFi Stereo

Press [AUDIO] on the remote control, then select the "HIFI" or "MONO."

- During "MONO" mode playback, you cannot use [AUDIO] on the remote control.

Your Selection	HIFI		MONO
Type of recorded tape	L-channel	R-channel	
non Hi-Fi tapes	Monaural	Monaural	Monaural
Hi-Fi tapes recorded in Hi-Fi stereo	L	R	L+R

## Other Operations

### To cue or review picture during playback (Picture Search)

Use [▶▶] or [◀◀] ([ F.FWD ▶▶] or [REW ◀◀] on the front panel).

- Press it again and the unit will search in super high speed. (in the SLP mode only)

### To freeze the picture on TV screen during playback (Still mode)

Press [PAUSE II]. Each time you press the button, the picture will be forwarded by one frame.

- If the picture begins to vibrate vertically in the still mode, stabilize the picture by using [TRACKING ▲/▼] (or [TRACKING ▼/▲] on the front panel).
- If the picture is distorted or rolling vertically, adjust the vertical hold control on your TV if equipped.

### Counter Reset

Press [CLEAR/C.RESET].

### To play back in slow motion (Slow mode)

Press [PAUSE II] during playback, then press [▶▶] ([ F.FWD ▶▶] on the front panel).

- If you want to change speed in slow mode, press [▶▶] or [◀◀] ([ F.FWD ▶▶] or [REW ◀◀] on the front panel), slow speed will be more fast and slow mode.
- If the noise bars appear on the TV screen, you can reduce it by using [TRACKING ▲/▼] (or [TRACKING ▼/▲] on the front panel).

### Auto Rewind

When a tape reaches its end during playback, fast-forward or recording (except Timer Recording and One Touch Recording), the tape will automatically rewind to the beginning. After rewinding finishes, the unit will eject the tape.

### Hint

- To prevent damage to tape, speed will automatically return to normal after five minutes.
- To return to playback from the Picture Search/Still/Slow mode, press [PLAY ▶].

### Index Search

To search by index mark. An index mark is any space between recordings on one tape.



- Insert a tape into this unit.

- Press [SEARCH MODE] once.
- To select Index Mark
- To rewind  
  
 To fast forward
- When index mark is reached, playback automatically begins.

### Hint

- The Index Mark will be made automatically at the beginning of each recording.
- The time gap between Index Marks should be greater than 1 minute for SP mode, 2 minutes for LP mode and 3 minutes for SLP mode.

### Time Search

To search by length of time.



- Insert a tape into this unit.

- Press [SEARCH MODE] twice.
- Select the desired length of time for fast forwarding or rewinding.  
  
 (1 minute~9 hours and 59 minutes)
- To rewind  
  
 To fast forward
- When selected length of time is reached, playback will start automatically.

### Hint for Index Search & Time Search

 
- These functions are not available during recording.
- Press [STOP ■] to stop the search.
- If a tape ends during a search, your search will be canceled and the tape will rewind to the beginning.

## Auto Repeat


When Auto Repeat is on, the tape will automatically rewind and start over when it reaches the end. This will continue until Auto Repeat is turned off.



- 1 Press [SETUP], and choose "AUTO REPEAT" during playback.



 - 2 Press [▶] for "AUTO REPEAT", "ON" or "OFF".




### Hint

- The Auto Repeat can also be set "ON" or "OFF" by pressing [REPEAT] on the remote control.
- To cancel Auto Repeat, follow step 1 above. Then, press [▶] so that "OFF" appears beside "AUTO REPEAT". Press [CLEAR/C.RESET] to exit.
- If menu remains on the TV screen after step 2, press [CLEAR/C.RESET] to exit.
- The Auto Repeat playback will start automatically if you select "AUTO REPEAT" to "ON" in the stop mode.



## Recording

### Recording & OTR (One Touch Recording)

 
This unit has no tuner system for TV broadcasting. If you want to record any TV broadcast on this unit.



You can also set to external tuner. (refer to "Satellite Link" on page 14.)

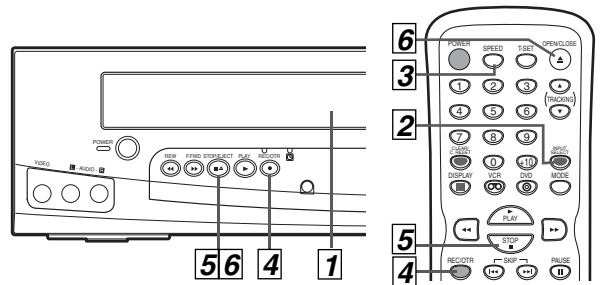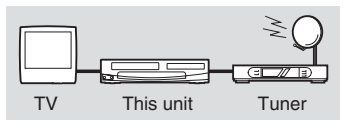

 - 1 Insert a recordable cassette into your DVD/VCR recorder.



- 2 Press [INPUT SELECT] until L1 or L2 is displayed on the screen. Choose L1 if the TV is connected to the rear of your DVD/VCR recorder, choose L2 if it is connected to the front.



You **CANNOT** dub a DVD to a videotape.

### To stop recording temporarily (Pause mode)

Press [PAUSE II].

- During the rec-pause mode, five ■ marks appear on the TV screen. Each ■ mark represents one minute.
- Press it again to resume recording.
- Pause mode will be automatically canceled after 5 minutes to prevent damage to the tape and the video head.

### Hint

- Do not change the channel on the external tuner while you are recording from. You only can record one channel and the same channel of the tuner.
- L1 or L2 refers to rear or front input jacks. L1 activates rear input jacks, L2 activates front input jacks.

- 3 Press [SPEED] to select the desired tape speed.



Tape Speed	Recording / Playback Time		
Type of tape	T60	T120	T160
SP mode	1hour	2hours	2-2/3hours
SLP mode	3hours	6hours	8hours

- 4 Press [REC/OTR] until desired recording time is selected.



- 5 Press [STOP ■] to stop recording.

 


- 6 Press [OPEN/CLOSE ▲] to eject the recorded cassette.



### Accidental erasure prevention

To prevent accidental recording, remove its record tab. To record on it later, cover the hole with adhesive tape.





Record tab

## Timer Recording



  
• Insert a recordable tape.

- 1 Press [SETUP], then select "TIMER PROGRAMMING".




Available program number flashes.

 - 2 Select an empty program number. Then press [▶] to go to next step.




**3** Select "ONCE", "DAILY" (Mon-Fri), or "WEEKLY". Then press **[▶]** to go to next step.



PROGRAM NUMBER 1  
 ▶ ONCE  
 DAILY  
 WEEKLY

 
**4** Select the desired date. Then press **[▶]** to go to next step.



ONE TIME PROGRAM  
 PROGRAM NUMBER 1  
 DATE 1 0 / 2 3 MON  
 START TIME --- : -- : --  
 END TIME --- : -- : --  
 L1/L2 ---  
 REC SPEED ---

• You can set a program one year in advance.

**5** Select the desired start time (hour). Then press **[▶]** to go to next step.

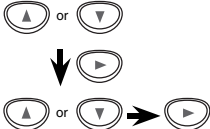


ONE TIME PROGRAM  
 PROGRAM NUMBER 1  
 DATE 1 0 / 2 3 MON  
 START TIME 0 7 : 3 0 ---  
 END TIME --- : -- : --  
 L1/L2 ---  
 REC SPEED ---

**6** Select "AM" or "PM". Then press **[▶]** to go to next step.



ONE TIME PROGRAM  
 PROGRAM NUMBER 1  
 DATE 1 0 / 2 3 MON  
 START TIME 0 7 : 3 0 ---  
 END TIME --- : -- : --  
 L1/L2 ---  
 REC SPEED ---  
 AM  
 PM

**7** Repeat the procedure in steps 5 and 6 to set the end time.



**8** Select "L1" or "L2". Then press **[▶]** to go to next step.



ONE TIME PROGRAM  
 PROGRAM NUMBER 1  
 DATE 1 0 / 2 3 MON  
 START TIME 0 7 : 3 0 PM  
 END TIME 0 8 : 3 0 PM  
 L1/L2 1 1  
 REC SPEED ---


**9** Select recording speed, then press **[CLEAR/C.RESET]**.




ONE TIME PROGRAM  
 PROGRAM NUMBER 1  
 DATE 1 0 / 2 3 MON  
 START TIME 0 7 : 3 0 PM  
 END TIME 0 8 : 3 0 PM  
 L1  
 REC SPEED SP  
 SP  
 SLP

• To set another program after step 9, press **[▶]**. Then, continue with step 2.

**10** Press **[T-SET]** to set timer standby mode.



•  indicator on the front panel lights up. The unit will change to the DVD mode.

**Hint**

- To go back one step, press **[◀]** during steps 3 to 9.
- L1 or L2 refers to rear or front input jacks. L1 activates rear input jacks, L2 activates front input jacks.




### To Check, Correct or Cancel a Timer Program

- 1) Press **[T-SET]** then, **[VCR]** on the remote control.
- 2) Select main menu by pressing **[SETUP]**.
- 3) Select "TIMER PROGRAMMING" by using **[▲/▼]**, then press **[▶]**.
- 4) Select the program number which you want to check by using **[▲/▼]**. The details of the program you selected will appear on the TV screen.
  - Go to the digit you want to change by using **[◀▶]**. Then, enter correct numbers by using **[▲/▼]**.
  - You may cancel the entire program by pressing **[◀]** while the program number blinks.
- 5) Press **[CLEAR/C.RESET]** to exit.
- 6) Press **[T-SET]** to return to timer standby mode.

### To cancel a Timer Recording in progress

Press **[STOP/EJECT ■ ▲]** on the unit.

 
 
### Hints for OTR and Timer Recording

- If a tape is not in the unit or does not have the record tab,  indicator on the front panel blinks and Timer Recording cannot be performed. Please insert a recordable tape.
- When Timer Recordings are set,  indicator on the front panel lights up. To use the VCR as usual until the time for the recording, press **[T-SET]** so that  indicator light turns off.

### After an OTR or a Timer Recording has been set, this unit operates as follows:

- If a tape runs out before an OTR or a Timer Recording is finished, the unit ejects the tape. Press **[T-SET]** on the remote control or **[STOP/EJECT ■ ▲]** on the unit, then press **[VCR]** to activate the VCR function again.
- Once the unit turns to the timer standby mode, no VCR functions are available until **[T-SET]** is pressed.
- To cancel the timer standby mode, press **[T-SET]** on the remote control or **[STOP/EJECT ■ ▲]** on the unit, then press **[VCR]** to activate the VCR function again.

### When an OTR or a Timer Recording is completed...

- If Auto Power Off for DVD has been activated and there are Timer Recordings on standby, the unit turns off automatically, and  indicator on the front panel lights to indicate the unit is in the timer standby mode.
-  indicator on the front panel flashes if there are no more Timer Recordings on standby.
- If Auto Power Off for DVD has **NOT** been activated, the unit switches to the DVD mode and all the VCR functions will be unavailable. All the DVD functions are available during OTR, timer standby mode and Timer Recording.
- Press **[STOP/EJECT ■ ▲]** on the front panel or **[T-SET]** on the remote control to use the VCR when the unit is off.
- Press **[OUTPUT]** on the front panel or **[VCR]** on the remote control to use the VCR when the unit is on. In case Timer Recording is in standby mode, press **[STOP/EJECT ■ ▲]** on the front panel or **[T-SET]** on the remote control, and then press **[OUTPUT]** on the front panel or **[VCR]** on the remote control.

### If you want to use the DVD player during a Timer Recording or while indicator on the front panel is on or blinking.

- Press **[POWER]** to turn on the unit. Press **[DVD]** on the remote control to choose DVD mode, then continue with the other DVD features as described in this manual.

### NOTE (For Timer Recording) :

- If there is a power failure or the unit is unplugged for more than 30 seconds, clock and all timer settings will be lost.

## Satellite Link

You can set the unit to start recording whenever it detects a video signal from the external tuner.

### Preparing for the Satellite Link Timer Recording:

#### Preparation on the tuner


- Satellite Link accepts only the connection from L1 (rear) with Satellite Box / Cable Box. (The connection from L2 cannot read any signals from the Satellite Box / Cable Box.)
- The external tuner should be equipped with some kind of timer function. Using timer function of the tuner, set it to be turned on when it comes to the time you want to start recording, and off when it comes to the time you want to finish recording. (Refer to the tuner's manual on how to set the timer.)
- Make sure to turn the power off when you finish setting.

#### Preparation on this unit

- Make sure to select the desired Recording mode beforehand.




- Insert a recordable tape.

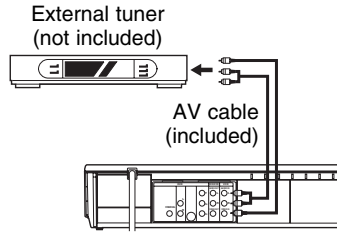


- 1 In stop mode, press **[SETUP]**.



 - 2 Select "SATELLITE LINK". Then press **[▶]** to go to next step.




 - 3 Set the desired start time. Then press **[▶]** to go to next step.



- The hour can be selected from 1-12 with AM or PM.
- Repeat procedures in step 3 to set the desired minutes.
- If you wish to go back to the left, press **[◀]**.

 - 4 Press **[POWER]** to turn unit off. VCR will go into satellite standby mode.



- Satellite unit must be turned on for VCR Satellite Link to start. If satellite box power is not on, Satellite Link will remain in standby mode.

#### To cancel the Satellite Link function while in standby mode:

Press **[T-SET]** on the remote control or **[STOP/EJECT ■ ▲]** on the front panel of the unit to turn on the unit.

#### To cancel the Satellite Link function while the Satellite Link Recording is in progress:

Press **[STOP/EJECT ■ ▲]** on the front panel of the unit.


### Hint

- If you have not set the clock, the clock setting window will appear at step 2. Refer to "Clock Setup" on page 8.
- You cannot set the End time for the Satellite Link Timer Recording on this unit.
- Recording picture will be distorted if the copy protection signal is being detected during Satellite Link Timer Recording.
- When a regular Timer Recording and the Satellite Link Timer Recording are overlapped, those recordings are recorded as illustrated below.

	Example 1	Example 2	Example 3
Timer Recording			
Satellite Link			
Actual Recording			

## Copying a Videotape

**Warning:** Unauthorized recordings of copyrighted video tapes may be an infringement of copyright laws.

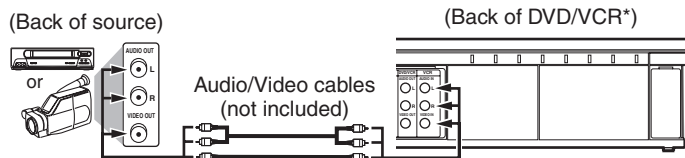

- 1) Insert a pre-recorded tape into another VCR for playing.
- 2) Insert a recordable tape into your DVD/VCR recorder for recording.
- 3) Press **[SPEED]** on your remote control to select recording speed (SP/SLP).
- 4) Press **[INPUT SELECT]** on your remote control. Choose L1 if source is connected to rear input jacks, or L2 if connected to the front. See page 9 for more information on front and rear terminals.
- 5) Press **[REC/OTR]** on your DVD/VCR recorder.
- 6) Press play on the source player.

- 7) To stop recording, press **[STOP/EJECT ■ ▲]** on the recording unit, then stop source playback.

### Hint

- For best results during dubbing, use the front panel controls whenever possible. The remote control might affect another source's operation.
- Always use video-quality shielded cables with RCA-type connectors. Standard audio cables are not recommended.
- You can use a video disc player, satellite receiver or other audio/video component with Audio / Video outputs.
- "L2" input jacks are on the front of this unit.



# DVD Functions

## Playback

Before: Turn on the TV, amplifier and any other components which are connected to this unit. Make sure the TV and audio receiver (commercially available) are set to the correct channel.



<b>1</b>	<b>2</b>
 POWER → OPEN/CLOSE	Insert a disc with label facing up.
<b>3</b>	<b>4</b>
To start playback 	To stop playback 

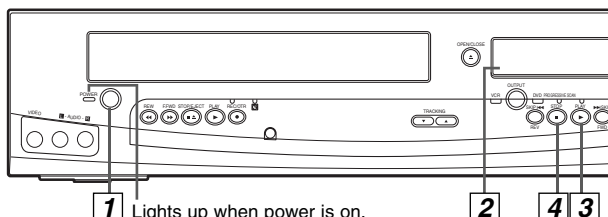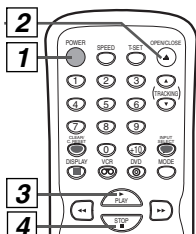

### Hint

- When you play an MP3 file, details on page 16.
- A "prohibited icon" may appear at the top-right on the TV screen when the operation is prohibited by the disc or this unit.
- Some DVDs may be played from title 2 or 3 due to specific programs.
- **During the playback of a two-layered disc, pictures may stop for a moment. This happens while the 1st layer is being switched to the 2nd layer. This is not a malfunction.**

**TIP:** You can change the on-screen language for DVD function in "PLAYER MENU" setting. (Refer to page 20.)

## DVD menu



Some discs contain menus which allow you to customize DVD playback. Use [▲/▼/◀/▶] to select an item, then press [ENTER] (or [PLAY ▶]).

### Calling Up a Menu Screen during Playback



- Press [MENU] to call up the DVD menu.
- Press [TOP MENU] to call up the title menu.

### Hint


- Menu operations may vary depending on the disc. Refer to the manual accompanying the disc for details.

## Resume



Press [STOP ■] during playback. Resume message will appear on the TV screen.

Press [PLAY ▶], playback will resume from the point at which playback was stopped.

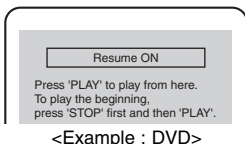

### Hint

- To cancel resume, press [STOP ■] one more time in the stop mode.
- For MP3, playback will resume from the beginning of the track at which playback was stopped.
- The resume information stays on even when the power is turned off.

## Paused and Step-by-Step Playback



Press [PAUSE II] during playback. To continue playback, press [PLAY ▶].



The disc goes forward by one frame each time [PAUSE II] is pressed in the pause mode. To continue playback, press [PLAY ▶].

### Hint

- On DVDs, set "STILL MODE" to "FIELD" in the DISPLAY menu if pictures in the pause mode are blurred. (Refer to pages 20-21.)

## To use [SKIP ◀◀ / REV], [▶▶ SKIP / FWD] on this unit



Press once to skip chapters or tracks to a desired point.

## Fast Forward / Reverse Search



Press [▶▶] or [◀◀] repeatedly during playback to select the required forward or reverse speed.

To use [SKIP ◀◀ / REV], [▶▶ SKIP / FWD] on this unit Pressing and holding [SKIP ◀◀ / REV] or [▶▶ SKIP / FWD] on this unit will also change forward or reverse playback speed. To continue playback, press [PLAY ▶].

### Hint

- For DVDs, fast forward or reverse search speed is different depending on the disc. Approximate speed is 1(x2), 2(x8), 3(x20), 4(x50), 5(x100).
- For Audio CDs and MP3, approximate speed is 1(x2), 2(x8), 3(x30).

## Slow Forward / Reverse



Press [▶▶] or [◀◀] repeatedly in the pause mode to select the required forward or reverse speed.

To use [SKIP ◀◀ / REV], [▶▶ SKIP / FWD] on this unit Pressing and holding [SKIP ◀◀ / REV] or [▶▶ SKIP / FWD] on this unit in the pause mode will also change forward or reverse playback speed.

To continue playback, press [PLAY ▶].

### Hint

- Slow forward or reverse speed is different depending on the disc. Approximate speed is 1(1/16), 2(1/8), 3(1/2).
- Set "STILL MODE" to "FIELD" in the DISPLAY menu if pictures in the slow playback mode are blurred. (Refer to pages 20-21.)

## Zoom



- 1) Press [ZOOM] during playback.
- 2) Press [ZOOM] repeatedly to select the required zoom factor: x2, x4 or OFF.



- 3) Press [▲/▼/◀/▶] to slide the zoomed picture across the screen.
- 4) To exit zoom mode, press [ZOOM] to select OFF.

### Hint

- Zooming function does not work while the disc menu is displayed.
- x4 zoom is not available on some discs.
- The picture may be distorted when you press [PAUSE II] or [◀◀] repeatedly in the zoom mode.
- In the zoom mode, it automatically changes [x2(x4)] to the zoomed position guide.


# MP3 Playback

MP3 is a method of compressing files. You can copy MP3 files on CD-R/RWs from the computer and play the files on this unit.



Insert an MP3-format disc, the file list will automatically appear on the TV screen. Press **[MENU]** when you want to call up the file list again while MP3-format disc is already inserted.

1 When selecting the folder:

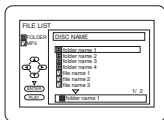

- Press **[▶]** when you want to go to the next hierarchy.
- Press **[◀]** when you want to go back to the previous hierarchy (except for the top hierarchy).

2 To cancel MP3 playback, press **[STOP ■]**.



Refer to "Resume" on page 15.

## Hint



- Some selections may take a while to be recognized.
- Press **[TOP MENU]** to return to the first item.
- Folders are known as Groups; files are known as Tracks.
- Folders and MP3 are displayed respectively as **[G]** and **[T]**.
- A maximum of 255 folders or 999 files may be recognized on one disc.
- Up to 8 hierarchies can be recognized in one folder. File in the 9th or deeper hierarchies cannot be played back.

**This player recommends files recorded under the following circumstances:**

- Sampling frequency: 44.1kHz or 48kHz
- Constant bit rate: 32kbps ~ 320kbps
- For MP3 file recorded in Variable Bit Rate(VBR), the unit may not display the actual elapsed time.


# On-Screen Display

You can check the information about the current disc by pressing **[DISPLAY]** on the remote control.

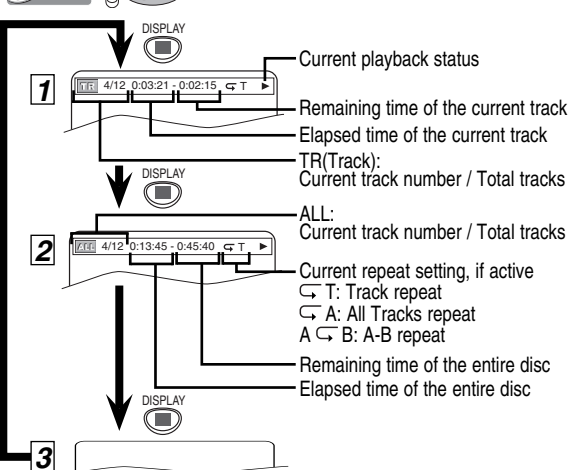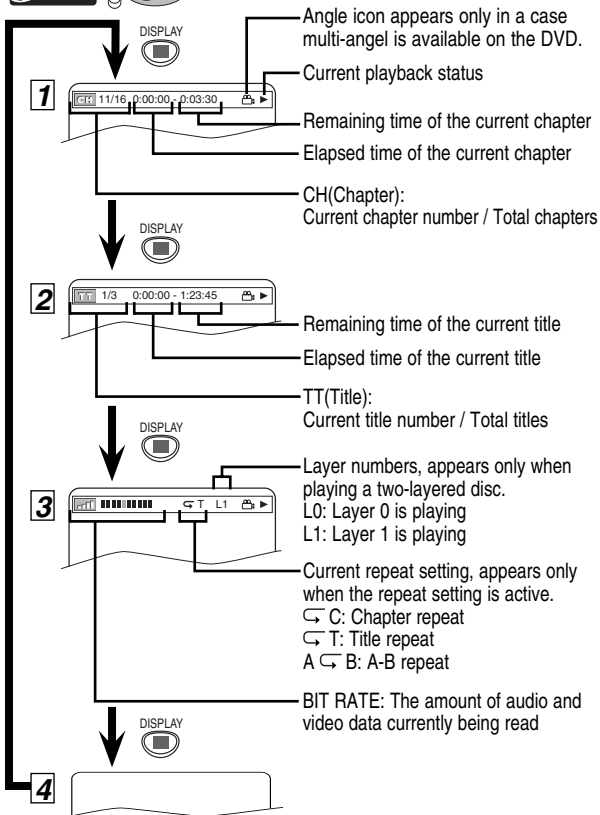

## Hint

- You are playing a disc in PROGRAM or RANDOM mode, **[▶]** PROGRAM (or RANDOM) will be displayed instead of **[▶]**.

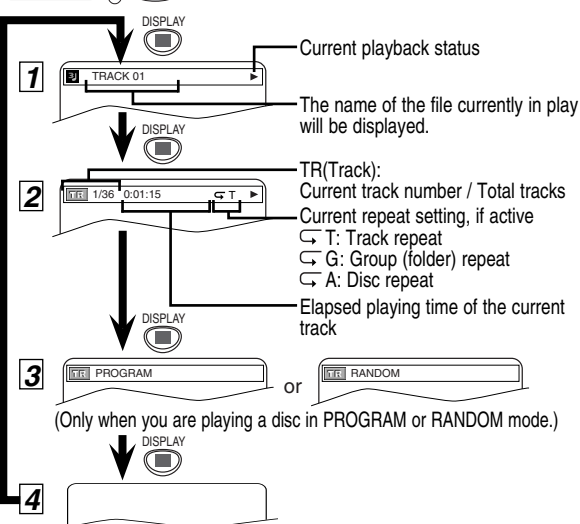


# Search Functions

SEARCH MODE does not work during Programmed or Random Playback.


## Using Track Search



 1 Press [SEARCH MODE].



 
2 Select track number by using the Number buttons within 30 seconds.



- For the disc with less than 10 tracks, press the track number directly.
- For discs with more than 10 but less than 99 tracks, to play single-digit track, press [0] first, then the track number (e.g. for track 3, press [0], [3]). To play a double-digit track, press the track number.
- For discs with more than 100 tracks, to play a single or a double-digit track, press [0] first, then the track number (e.g. for track 3, press [0], [0], [3], and for track 26, press [0], [2], [6]). To play a triple-digit track, press the track number.

## Using [SKIP |◀, ▶|]

 1 Press [SKIP |◀, ▶|] during playback.




### Hint

- [+10] can also bring the Track search display, except for the disc with less than 10 tracks. For such a disc, track search can be done by just pressing the track number.
- For Audio CDs and MP3, Track Search is not available for Program and Random Playback.


## Using Title / Chapter Search



 1 Press [SEARCH MODE] once for the Chapter Search. Press [SEARCH MODE] twice for the Title Search.




 2 Select title/chapter number by using the Number buttons within 30 seconds.



## Using [SKIP |◀, ▶|]

1 Press [SKIP |◀, ▶|] during playback.

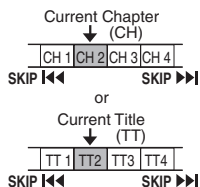

(If the disc has no chapters)

### Hint

- Depending on the disc being played, this function can also be performed by directly entering the desired chapter number with the **Number buttons**. Refer to the manual accompanying the disc.

## Using Time Search



1 Press [SEARCH MODE] repeatedly until the Time Search display appears.



2 Select a desired disc time by using the Number buttons within 30 seconds.



### Hint

- When there is no need to enter a number, "0" appears automatically. For example, "0: 0: \_ \_" appears in the Time Search display if the total time of the title or track is less than 10 minutes.
- Press [CLEAR/C.RESET] to erase the incorrect input at step 2.
- For Audio CDs, Time Search is not available for Program and Random Playback.

## Marker Setup



 
This feature allows you to assign a specific point on a disc to be called back later.

### To set a marker


1 Press [SEARCH MODE] repeatedly until the marker display appears.



2 Select a marker.




3 Press [ENTER].


 


### To return to the marker later

 
1 Press [SEARCH MODE] repeatedly until the marker display appears.



2 Select the marker.

  

3 Press [ENTER] at the desired marker.

 

### To exit the marker screen

1 Press [RETURN ←].



### Hint

- The Marker display will disappear in about 30 seconds when there is no output.
- To clear a marker, select the marker to be cleared at step 2 in the section "To set a marker" or "To return to the marker later" and then press [CLEAR/C.RESET].
- Opening the disc tray or turning off the power will erase all markers.
- Selecting "AC" at step 2 in the section "To set a marker" or "To return to the marker later" will also erase all markers.

# Repeat / Random / Programmed Playback

## Repeat Playback




Repeat function is available only during playback.

- 1 Press **[REPEAT]** during playback.



Each time you press **[REPEAT]** repeat function changes as example below.

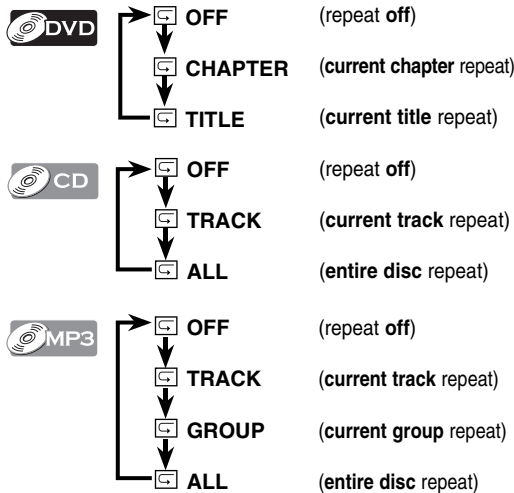

### Hint

- Repeat setting (except "ALL") will be cleared when moving to another title, chapter, track or group.
- Repeat playback are not available with some discs or during repeat A-B playback.

## Repeat A-B Playback



Repeat function is available only during playback.

- 1 Press **[A-B]** at your desired starting point (A).



- 2 Press **[A-B]** at your desired ending point (B).



- Point B should be in the same title or track as point A.

### Hint

- To exit the sequence, press **[A-B]** so that "OFF" appears.
- To cancel point A, press **[CLEAR/C.RESET]** at step 1.
- This function does not work in the other repeat modes.

## Random Playback



This function shuffles the playing order of tracks instead of playback in sequence.

- 1 Press **[MODE]** twice.



- 2 Press **[PLAY ▶]** to start Random Playback.



### Hint

- To repeat the current track in the random selections, press **[REPEAT]** repeatedly until "TRACK" appears during playback.
- To repeat the entire random selections, press **[REPEAT]** repeatedly until "ALL" appears during playback.
- During random playback, you cannot go back to the previous track.

## Programmed Playback



You may determine the order in which tracks will play.

- 1 Press **[MODE]** once.

 


- 2 Using **[▲/▼]** to select desired track. Press **[ENTER]**.



- Up to 99 tracks can be programmed.
- If eight or more tracks were in a program, use **[SKIP ◀▶]** to see all the tracks.
- While an MP3 folder is open:
  - Press **[▶]** when you want to go to the next hierarchy.
  - Press **[◀]** when you want to go back to the previous hierarchy (except for the top hierarchy).

- 3 Press **[PLAY ▶]** to start Programmed Playback.



### Hint

- Press **[CLEAR/C.RESET]** at step 2 to erase the most recently entered track.
- To erase all programmed tracks at once, select "ALL CLEAR" and press **[ENTER]** at step 2.
- While a program is being played back, **[STOP ■]** works as follows:
  - ⇒ Press **[STOP ■]** and **[PLAY ▶]** next, so that the programmed playback restarts. (CD playback restarts from the current point. MP3 playback restarts from the beginning of the current track.)
  - ⇒ Press **[STOP ■]** twice and **[PLAY ▶]** next, so that playback restarts from the first track in the original order. However, your programmed playback can be restarted when you follow the above steps. (Your programs are still stored until either the disc tray is open or power is turned off.)
- To repeat the current track in the program, press **[REPEAT]** repeatedly until "TRACK" appears during playback.
- To repeat the entire program, press **[REPEAT]** repeatedly until "ALL" appears during playback.

# Special Settings

## Subtitle Language




This unit allows you to select a subtitle language (if available) during DVD playback.

- 1 Press **[SUBTITLE]** during playback.



Each time you press **[SUBTITLE]**, subtitle language changes as example below.

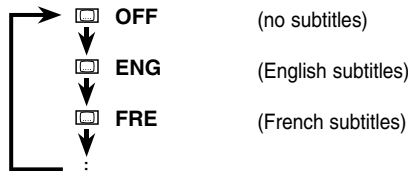

### To set subtitle ON/OFF

- 1 Press **[SUBTITLE]** during playback.



- 2 Press **[▶]** to select subtitle ON or OFF.



### Hint

- If your language is not shown after pressing **[SUBTITLE]** several times, the disc may not have that language. However, some discs have the subtitle language setting on the disc menu. (Operation varies depending on the discs, so refer to the manual along with the disc.)
- When "NOT AVAILABLE" appears on the TV screen, it means no subtitle is recorded on the scene.
- If you choose a language that has a three-letter-language code, the code will be displayed every time you change the subtitle language setting. If you choose any other languages, "----" will be displayed instead. (Refer to page 24.)
- Some discs will only allow you to change the subtitle from the disc menu. Refer to the manual accompanying the discs for details.

## Audio Language



This unit allows you to select an audio language (if multiple languages are available) during DVD playback.

- 1 Press **[AUDIO]** to change audio language.



Each time you press **[AUDIO]**, the audio language changes as example below.



### Hint

- If your language is not shown after pressing **[AUDIO]** several times, the disc may not have that language. However, some discs allow audio language setting on the disc menu. (Operation varies depending on the disc, so refer to the manual along with the disc.)
- When "OFF" appears on the TV screen, it means audio language is not available.
- Some discs will only allow you to change the audio setting from the disc menu. Refer to the manual accompanying the discs for details.

## Camera Angle



Some DVD discs may contain scenes which have been shot simultaneously from various angles. You can change the camera angle if the angle icon appears on the screen. If the "ANGLE ICON" setting is "OFF" in the OTHERS menu, the angle icon will not appear. (Refer to pages 20-22.)

- 1 Press **[ANGLE]** during playback.



## Black Level Setting



Adjust the Black Level Setting to make the dark areas of the TV picture brighter.

- 1 Press **[MODE]** during playback.



- 2 Press **[ENTER]** to adjust the black level.



ON: Makes the dark areas brighter.  
OFF: Shows the original picture as recorded.

- 3 Press **[RETURN ↵]** to exit.

 


## Stereo Sound Mode




This unit allows you to select a sound mode during CD playback.

- 1 Press **[AUDIO]** during CD playback.



Each time you press **[AUDIO]**, sound mode changes as example below.

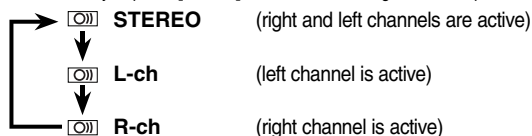

## Virtual Surround



You can enjoy stereophonic virtual world on your existing 2 channel stereo system.

- 1 Press **[MODE]** twice (once for CD and MP3) during playback.



- 2 Press **[ENTER]** for the desired effect.

1: Natural effect  
2: Emphasized effect  
OFF: No effects (original sound)



- 3 Press **[RETURN ↵]** to exit.



### Hint

 
For CD play back only

- Virtual Surround will not be effective if the sound mode is set to something other than STEREO. Refer to "Stereo Sound Mode".
- When playing back 96kHz with Virtual Surround function, the sound will be down sampling at 48kHz and output as digital audio.

## QUICK SETUP Menu

You can select the "PLAYER MENU", "TV ASPECT", "PROGRESSIVE" or "DOLBY DIGITAL" from the QUICK SETUP menu quickly.

**1** Press [SETUP] in the stop mode.




<SETUP MENU>

Confirm that "QUICK" is selected.



**2** Select the desired item.

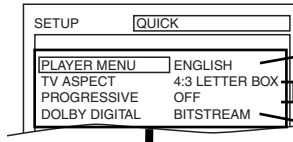

- P20 **A** Step 5
- P21 **B** Step 5
- P21 **C** Step 5


• Refer to the sections "PLAYER MENU", "TV ASPECT", "PROGRESSIVE" or "DOLBY DIGITAL" section on page 20 or 21.

## CUSTOM Menu

 You can change the settings of the unit.

- **QUICK** on pages 20-21 indicates DVD Setup menus also accessible from the QUICK SETUP menu.

**1** Press [SETUP] in the stop mode.




<SETUP MENU>




**2** Select "CUSTOM".



**3** Select the desired item.

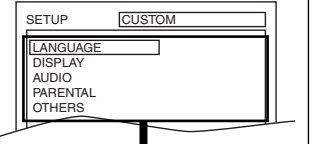


LANGUAGE menu

 


page 20 **A**

 DISPLAY menu




page 21 **B**

 AUDIO menu




page 21 **C**

 PARENTAL menu



page 22 **D**

 OTHERS menu




page 22 **E**


## **A** LANGUAGE Setting

 Follow steps 1 to 3 in the "CUSTOM Menu" section on above.

**4** Select the desired item.




LANGUAGE menu

 

### Hint

• In QUICK SETUP Menu, "PLAYER MENU", "TV ASPECT", "PROGRESSIVE" or "DOLBY DIGITAL" are available. QUICK SETUP Menu consists of the setting menus frequently used, and they are accompanied with **QUICK** mark. You can make all settings in CUSTOM Menu.

 **5** Select the desired language.




**AUDIO: \*1 \*2**  
(Default: ORIGINAL)  
Sets the audio language.

**SUBTITLE: \*1 \*2**  
(Default: OFF)  
Sets the subtitle language.

**DISC MENU: \*1**  
(Default: ENGLISH)  
Sets the language for DVD menu.

**PLAYER MENU: QUICK**  
(Default: ENGLISH)  
Sets the language for the On-screen display.

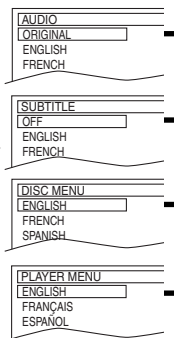

**6** To exit the menu



### Hint

- \*1**
  - Language options are not available with some discs.
  - If OTHER is selected on the AUDIO, SUBTITLE or DISC MENU screen, press four-digit number to enter the code for the desired language. (Refer to the language code list on page 24.)
  - Only the languages supported by the disc can be selected.
- \*2**
  - Language Setting for Audio and Subtitle are not available with some discs. Then use [AUDIO] and [SUBTITLE]. Details are on page 19.

## B DISPLAY Setting

You can change the display functions. Follow steps 1 to 3 in the "CUSTOM Menu" section on page 20.

**4** Select the desired item.

DISPLAY menu

**Hint**  
**PROGRESSIVE:**

- You can set "PROGRESSIVE" to "OFF" in the DISPLAY menu or press and hold [PLAY ►] on the front of the unit for more than 5 seconds during playback until the PROGRESSIVE SCAN indicator on the front panel lights off.
- When "PROGRESSIVE" is "ON", video signals from the unit's VIDEO OUT and S-VIDEO OUT jacks will be distorted or not be output at all.

**Hint**

- In QUICK SETUP Menu, "PLAYER MENU", "TV ASPECT", "PROGRESSIVE" or "DOLBY DIGITAL" are available. QUICK SETUP Menu consists of the setting menus frequently used, and they are accompanied with **QUICK** mark. You can make all settings in CUSTOM Menu.

**5**

**TV ASPECT: QUICK**  
(Default: 4:3 LETTER BOX)  
See Hint on the right.

**STILL MODE:**  
(Default: AUTO)  
See Hint on the right.

**PROGRESSIVE: QUICK**  
(Default: OFF)  
See Hint on the left.

If there is no picture or you do not press any buttons for 15 seconds, Progressive scan will switch to "OFF" and it will exit the setup menu.

**6** To exit the TV ASPECT or STILL MODE screen

To complete the PROGRESSIVE setting

**Hint**  
**TV ASPECT:**

- Select "4:3 LETTER BOX", so that black bars may appear on the top and bottom of the screen.
- Select "4:3 PAN & SCAN" for a full height picture with both sides adjusted.
- Select "16:9 WIDE" if a wide-screen TV is connected to this unit.

**STILL MODE:**

- Select "AUTO" usually.
- If you select "AUTO", automatically select the best resolution setting (FRAME or FIELD) based on the data characteristics of the pictures. (default)
- If you select "FIELD", the picture in the still mode will be stabilized.
- If you select "FRAME", the picture in the still mode will be highly defined.
- An individual picture on the TV screen is called a "frame", which consists of two separate images called as "field".
- Some pictures may be blurred if you select "AUTO" in the still mode due to their data characteristics.

## C AUDIO Setting

Choose the appropriate audio settings for your equipment. It only affects during the playback of DVD discs. Follow steps 1 to 3 in the "CUSTOM Menu" section on page 20.

**4** Select the desired item.

AUDIO menu

**Hint**

- In QUICK SETUP Menu, "PLAYER MENU", "TV ASPECT", "PROGRESSIVE" or "DOLBY DIGITAL" are available. QUICK SETUP Menu consists of the setting menus frequently used, and they are accompanied with **QUICK** mark. You can make all settings in CUSTOM Menu.

**5**

**DRC (Dynamic Range Control):**  
(Default: ON)  
Set to "ON" to compress the range between soft and loud sounds.

**DOWN SAMPLING:**  
(Default: ON)  
Set to "ON" when outputting in 48kHz.  
Set to "OFF" when outputting the original sound.

**DOLBY DIGITAL: QUICK**  
(Default: BITSTREAM)  
Set to "BITSTREAM" when the unit is connected to a Dolby Digital decoder.

- BITSTREAM: outputs Dolby Digital Signals.
- PCM: converts the Dolby Digital into PCM (2 channel).

**6** To exit the menu

**Hint**  
**DRC:**

- This function is available only on the discs which are recorded in the Dolby Digital format.

**DOWN SAMPLING:**

- When playing back a 96kHz disc with the copyright protection, or when Virtual Surround is set to "1" or "2", the sound will be down sampled at 48kHz and output as digital audio even if the "DOWN SAMPLING" is set to "OFF".
- This function is available only on digital outputting of a disc recorded in 96kHz.

 
## D PARENTAL Setting

This feature prevents unit from playing material inappropriate for children.

### Parental Levels

Parental Level allows you to set the rating levels of your DVD discs. Playback will stop if the ratings exceed the levels you set. Follow steps 1 to 3 in the "CUSTOM Menu" section on page 20.

**4** Enter your desired four-digit password.



**PARENTAL menu**

SETUP PARENTAL

PASSWORD

Please enter a 4-digit password.

■ ■ ■ ■

Or

If you have set a password already, enter the current four-digit password.


SETUP PARENTAL

PASSWORD

Enter current password.

■ ■ ■ ■

**5** Select "PARENTAL LEVEL".

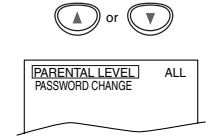

**CONTROL LEVELS**

- ALL: All parental locks are canceled.
- Level 8: DVD softwares of any grades (adult/general/children) can be played back.
- Levels 7 to 2: Only DVD softwares intended for general use and children can be played back.
- Level 1: Only DVD softwares intended for children can be played back, with those intended for adult and general use prohibited.


**TIPS FOR LEVELS**

- 8 [ADULT]: DVD softwares of any grades (adult/general/children) can be played back.
- 7 [NC-17]: No one under 17 admitted
- 6 [R]: Restricted; under 17 requires accompanying parent or adult guardian
- 5 [PGR]: Parental Guidance Recommended
- 4 [PG13]: Unsuitable for children under 13
- 3 [PG]: Parental Guidance suggested
- 2 [G]: General Audience
- 1 [KID SAFE]: Suitable for children


**Hint**

- DVD-Video discs may not respond to the parental lock settings. Make sure this function works with your DVD-Video discs.

**6** Select the desired level.

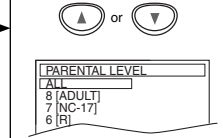


**7** To exit the menu



### To Change the Password for Parental Controls

You can change your password for parental controls. Follow steps 1 to 3 in the "CUSTOM Menu" section on page 20.

**4** Enter current four-digit password.



**PARENTAL menu**


SETUP PARENTAL

PASSWORD


Enter current password.

■ ■ ■ ■


**5** Select "PASSWORD CHANGE".

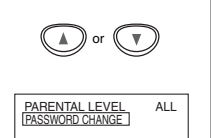

 **6** Enter your new four-digit password (except for 4737).



**7** To exit the menu

 


**Hint**

- Record the password in case you forget it.
- If you forget the password, press [4], [7], [3], [7] at step 4, then enter your new password. Password will be cleared and parental levels will be set to "ALL".

## E OTHERS Settings

You can change the other functions. Follow steps 1 to 3 in the "CUSTOM Menu" section on page 20.

 **4** Select the desired item.



**OTHERS menu**


SETUP OTHERS

ANGLE ICON ON

 
AUTO POWER OFF ON

**5**


**ANGLE ICON:**  
(Default: ON)  
Set to "ON" to show the angle icon when multiple camera angles are available during DVD playback.




**AUTO POWER OFF:**  
(Default: ON)  
Set to "ON" to turn this unit off automatically after 30 minutes of no use.



**6** To exit the menu

 

## Reset to the Default Setting (Except for PARENTAL Setting)

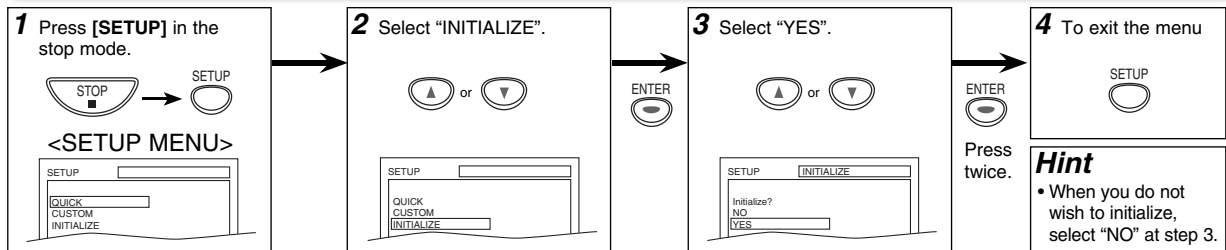

## Information

### Troubleshooting Guide

If this unit does not perform properly when operated as instructed in this Owner's Manual, refer to the following:

	PROBLEM	CORRECTIVE ACTION
DVD / VCR	No power.	<ul style="list-style-type: none"> <li>Make sure the power plug is connected to an AC outlet.</li> <li>Make sure the power is turned on.</li> </ul>
	This unit does not respond to the remote control.	<ul style="list-style-type: none"> <li>Check if the power plug is connected to an AC outlet.</li> <li>Check the batteries in the remote control.</li> <li>Aim the remote control directly at the remote sensor. If necessary, remove all the obstacles between the sensor and the remote control.</li> <li>You have to be within 23 feet (7m) of this unit.</li> <li>Check if a cassette tape is in this unit.</li> <li>Tune your radio to an empty AM station so that you hear a lot of static. Turn the volume up, then if you hear some signal sound from the radio in response to your pressing buttons on the remote control, the remote control is working.</li> <li>Press and hold any button on remote control toward a digital camera. The remote control is working if you confirm infrared light through the digital camera.</li> </ul>
	Poor picture or noise.	<ul style="list-style-type: none"> <li>Interference signal may be received. Change the position and orientation of the unit.</li> </ul>
VCR	Cannot record a TV program.	<ul style="list-style-type: none"> <li>This unit does not have a tuner to receive TV broadcasting.</li> <li>You must connect this unit to TV or an external tuner to record TV programs. (Refer to "Recording &amp; OTR (One Touch Recording)" on page 12 and "Satellite Link" on page 14.)</li> </ul>
	Timer recording is impossible.	<ul style="list-style-type: none"> <li>Make sure the Timer Recording is set correctly.</li> <li>Make sure [ ] indicator on the front panel lights up. If not, press [T-SET].</li> <li>Make sure the VCR clock is set correctly.</li> </ul>
	Cannot go into record mode.	<ul style="list-style-type: none"> <li>Make sure the tape has a record tab. If needed, cover the hole with adhesive tape.</li> <li>Activate this unit in VCR mode. Press [VCR] on the remote control so that the VCR OUTPUT light will illuminate.</li> </ul>
	Playback picture is partially noisy.	<ul style="list-style-type: none"> <li>Adjust tracking control for a better picture by pressing [TRACKING ▼/▲] on the unit or [TRACKING ▲/▼] on the remote control.</li> </ul>
	Cannot view a tape but the audio is OK.	<ul style="list-style-type: none"> <li>Head cleaning may be necessary. Refer to "AUTO HEAD CLEANING".</li> <li>Make sure the VCR is not in the Menu mode.</li> </ul>
	No or poor, playback picture.	<ul style="list-style-type: none"> <li>Fine tune your TV.</li> </ul>
	Video or color fades in and out when making a copy of a video tape.	<ul style="list-style-type: none"> <li>You cannot copy a copyrighted video tape. You are experiencing copy guard protection.</li> </ul>
Cannot remove the tape.	<ul style="list-style-type: none"> <li>Check if this unit is in the VCR mode. If not, press [VCR] on the remote control to switch the mode.</li> </ul>	
DVD	No picture.	<ul style="list-style-type: none"> <li>Connect the video cable firmly.</li> <li>Insert a correct video disc that plays on this unit.</li> <li>Press [DVD] on the remote control. Check if the DVD OUTPUT light will illuminate. Then try other DVD features.</li> <li>Set PROGRESSIVE correctly. Turn it on only if your TV has progressive scan and you are using the Component Video connections between the unit and the TV. Disable progressive scan for all other connections. (See page 7.)</li> </ul>
	Disc cannot be played.	<ul style="list-style-type: none"> <li>Insert the disc.</li> <li>Clean the disc.</li> <li>Place the disc correctly with the label side up.</li> <li>Cancel the parental lock or change the control levels.</li> <li>Handle a disc with special care so that it does not have fingerprints, scratches, or dusts on its surface.</li> </ul>
	No sound.	<ul style="list-style-type: none"> <li>Connect the audio cables firmly.</li> <li>Turn the power of the audio component on.</li> <li>Correct the audio output settings.</li> <li>Correct the input settings on the audio component.</li> </ul>
	No DTS audio is output	<ul style="list-style-type: none"> <li>This unit does not support DTS audio.</li> <li>-This is not a malfunction.</li> </ul>
	Distorted picture.	<ul style="list-style-type: none"> <li>Connect this unit directly to the TV.</li> <li>There are some cases where pictures may be slightly distorted, and those are not a sign of a malfunction.</li> <li>Although pictures may stop for a moment, this is not a malfunction.</li> <li>Check if the INTERLACE/PROGRESSIVE mode is set correctly according to your TV. See pages 20-21.</li> </ul>
	Audio or subtitle language does not match the setup.	<ul style="list-style-type: none"> <li>The selected language is not available for audio or subtitles on the DVD.</li> <li>-This is not a malfunction.</li> </ul>
	The camera angle cannot be changed.	<ul style="list-style-type: none"> <li>The DVD does not contain sequences recorded from different camera angles.</li> <li>-This is not a malfunction.</li> </ul>
	Audio or subtitle language cannot be changed.	<ul style="list-style-type: none"> <li>The DVD does not contain audio source or subtitles in the selected language.</li> <li>-This is not a malfunction.</li> </ul>
	"Prohibited icon" appears on the screen, prohibiting an operation.	<ul style="list-style-type: none"> <li>That operation is prohibited by this unit or the disc.</li> <li>-This is not a malfunction.</li> </ul>

- Some functions are not available in specific modes, but this is not a malfunction. Read the description in this Owner's Manual for details on correct operations.
- Playback from a desired track and random playback are not available during program playback.
- Some functions are prohibited on some discs.

# Specifications

Video Heads : Four Heads	Operating temperature : 41°F (5°C) to 104°F (40°C)	<ul style="list-style-type: none"><li>• Designs and specifications are subject to change without notice.</li><li>• If there is a discrepancy between languages, the default language will be English.</li></ul>
Output signal format : NTSC color	Dimensions : W : 17 3/16" (435mm) H : 3 3/4" (94mm) D : 9 3/16" (233mm)	
Power source : 120 V AC +/- 10%, 60 Hz +/- 0.5%	Weight :	
Power consumption : ?? W (standby: ??W)	Approx 5.8lbs (2.6kg)	

## SYLVANIA LIMITED WARRANTY

FUNAI CORP. will repair this product, free of charge in the USA in the event of defect in materials or workmanship as follows:

### DURATION:

**PARTS:** FUNAI CORP. will provide parts to replace defective parts without charge for one (1) year from the date of original retail purchase. Certain parts are excluded from this warranty.

**LABOR:** FUNAI CORP. will provide the labor without charge for a period of ninety (90) days from the date of original retail purchase.

### LIMITS AND EXCLUSIONS:

This warranty is extended only to the original retail purchaser. A purchase receipt or other proof of original retail purchase will be required together with the product to obtain service under this warranty.

This warranty shall not be extended to any other person or transferee.

This warranty is void and of no effect if any serial numbers on the product are altered, replaced, defaced, missing or if service was attempted by an unauthorized service center. This limited warranty does not apply to any product not purchased and used in the United States.

This product is produced for home use and this warranty only covers failures due to defects in material or workmanship which occurs during normal use. It does not cover damage which occurs in shipment, or failures which are caused by repairs, alterations or product not supplied by FUNAI CORP., or damage which results from accident, misuse, abuse, mishandling, misapplication, alteration, faulty installation, improper maintenance, commercial use such as hotel, rental or office use of this product or damage which results from fire, flood, lightning or other acts of God.

THIS WARRANTY DOES NOT COVER PACKING MATERIALS, ANY ACCESSORIES (EXCEPT REMOTE CONTROL), ANY COSMETIC PARTS, COMPLETE ASSEMBLY PARTS, DEMO OR FLOOR MODELS.

FUNAI CORP. AND ITS REPRESENTATIVES OR AGENTS SHALL IN NO EVENT BE LIABLE FOR ANY GENERAL, INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR OCCASIONED BY THE USE OF OR THE INABILITY TO USE THIS PRODUCT. THIS WARRANTY IS MADE IN LIEU

OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND OF ALL OTHER LIABILITIES ON THE PART OF FUNAI. ALL OTHER WARRANTIES INCLUDING THE WARRANTY OF MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED BY FUNAI AND ITS REPRESENTATIVES IN THE UNITED STATES. ALL WARRANTY INSPECTIONS AND REPAIRS MUST BE PERFORMED BY AN AUTHORIZED SERVICE CENTER. THIS WARRANTY IS VALID WHEN THE UNIT IS CARRIED-IN TO AN AUTHORIZED SERVICE CENTER.

### IMPORTANT:

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. IF, AT ANY TIME DURING THE WARRANTY PERIOD, YOU ARE UNABLE TO OBTAIN SATISFACTION WITH THE REPAIR OF THIS PRODUCT, PLEASE CONTACT FUNAI CORP.

### ATTENTION:

FUNAI CORP. RESERVES THE RIGHT TO MODIFY ANY DESIGN OF THIS PRODUCT WITHOUT PRIOR NOTICE.

### WARRANTY STATEMENT REGARDING NON AUTHORIZED REPAIRS:

To obtain warranty service, you must take the product, or deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, to any AUTHORIZED SERVICE CENTER. FUNAI CORP. will not reimburse you for any service done by unauthorized service providers without prior written approval.

To locate your nearest AUTHORIZED SERVICE CENTER or for general service inquiries, please contact us at:

FUNAI CORPORATION  
Customer Service

Tel : 1-800-968-3429

<http://www.SylvaniaConsumerElectronics.com>

19900 Van Ness Avenue, Torrance, CA 90501


## 1 Conexiones

Consulte la "Basic TV Connection" en la página delantera antes de utilizar esta unidad.

## 2 Instalación de las pilas del control remoto



## 3 Conmutación VCR/DVD

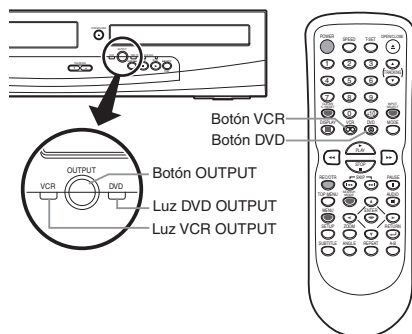

### MODO VCR

Pulse [VCR] en el control remoto. (Compruebe que está encendida la luz VCR OUTPUT.)

### MODO DVD

 
Pulse [DVD] en el control remoto. (Compruebe que está encendida la luz DVD OUTPUT.)

## 4 Activación de la unidad por primera vez




1 Asegúrese de que la entrada de su TV esté en VIDEO (El nombre puede cambiar según el fabricante del TV. Consulte el manual de su TV para conocer más detalles.)

2 Seleccione su idioma la primera vez que encienda esta unidad. A continuación, pulse [▶] para ir al siguiente paso.



 
3 Cuando "Clock Set" aparezca, avance al segundo paso de "Clock Setup" en esta página.



## 5 Ajuste del reloj




 1 Pulse [SETUP] para seleccionar "AJUSTE DE RELOJ". A continuación, pulse [▶] para ir al siguiente paso.




• Si no se ha ajustado el reloj, aparece la pantalla AJUSTE DE RELOJ cuando pulse [SETUP]. En este caso, vaya al paso 2.

 
2 Seleccione el mes actual. A continuación, pulse [▶] para ir al siguiente paso.



 
3 Seleccione el día actual. A continuación, pulse [▶] para ir al siguiente paso.



 
4 Seleccione el año actual. A continuación, pulse [▶] para ir al siguiente paso.




 
5 Seleccione la hora actual. A continuación, pulse [▶] para ir al siguiente paso.



 6 Seleccione los minutos actuales. A continuación, pulse [▶] para ir al siguiente paso.



7 Seleccione "AM" o "PM".

  





8 Para salir de la pantalla AJUSTE DE RELOJ



## 6 Reproducción de la grabadora de vídeo

Antes: Encienda el televisor.








<p><b>1</b> Inserte un casete de vídeo en esta unidad.</p> 	<p><b>2</b> Para empezar la reproducción</p> 
<p><b>3</b> Para parar la reproducción</p> 	<p><b>4</b> Para expulsar</p> 


## 7 Reproducción de DVD/CD

Antes: Encienda el televisor, amplificador y otros equipos que puedan estar conectados a esta unidad. Asegúrese que el televisor y el sintonizador de audio (de venta en los comercios) están en el canal correcto.



<p><b>1</b></p>  	<p><b>2</b> Ponga un disco con la etiqueta hacia arriba.</p> 
<p><b>3</b> Para empezar la reproducción</p> 	<p><b>4</b> Para parar la reproducción</p> 

## 8 Control remoto

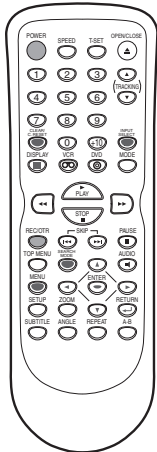

Disco/cinta Botón (Orden alfabético)	Modo DVD		Modo de grabadora de vídeo
	DVD	CD MP3	VHS
1 2 3 4 5 6 7 8 9 0	• Para seleccionar directamente el capítulo o el título.	• Para seleccionar directamente la canción.	—
◀ ▶	• Para buscar en avance/retroceso en un disco. • Para empezar la reproducción en avance/retroceso lento durante el modo de pausa.	• Para buscar en avance/retroceso en un disco.	• Para el avance/retroceso de una cinta.
A-B	• Para repetir entre los puntos A y B elegidos.	• Para repetir entre los puntos A y B elegidos.	—
ANGLE	• Para seleccionar los ángulos de la cámara en un disco.	—	—
AUDIO	• Para seleccionar el idioma de audio en un disco.	• Para seleccionar ESTÉREO, L-ch. o R-ch. (CD)	• Para seleccionar el modo HI-FI o el modo MONO durante la reproducción.
CLEAR/RESET	• Para borrar los marcadores. • Para borrar los números mal entrados. • Para borrar el punto para la repetición A-B.	• Para borrar los marcadores. (CD) • Para eliminar el N° de estado en la entrada de programa. • Para borrar los números mal entrados. • Para borrar el punto para la repetición A-B. (CD)	• Para salir del menú de la grabadora de vídeo. • Para reponer el contador de cinta.
DISPLAY	• Para indicar el modo de disco actual.	• Para indicar el modo de disco actual.	• Para indicar la hora actual, contador de cinta y L1 o L2.
DVD	• Para seleccionar el modo de salida de DVD. • Para activar el modo DVD.	• Para seleccionar el modo de salida de DVD. • Para activar el mando a distancia en el modo DVD.	—
ENTER	• Para mover el cursor y determinar su posición.	• Para mover el cursor y determinar su posición.	• Para seleccionar un ítem en el menú de la grabadora de vídeo. • Para avanzar al siguiente menú de la grabadora de vídeo. • Para volver un paso durante el ajuste del reloj y temporizador.
INPUT SELECT	—	—	• Para seleccionar L1 o L2.
MENU	• Para llamar el menú en un disco.	• Para llamar la lista de archivo. (MP3)	—
MODE	• Para activar/desactivar el nivel del negro. • Para activar/desactivar el ambiente virtual.	• Para disponer el orden de reproducción o la reproducción aleatoria. • Para activar/desactivar el envolvente virtual.	—
OPEN/CLOSE	• Para abrir o cerrar la bandeja del disco.	• Para abrir o cerrar la bandeja del disco.	• Para expulsar el videocasete de la grabadora de vídeo.
PAUSE	• Para hacer una pausa de reproducción del disco. • Para avanzar la reproducción un cuadro a la vez.	• Para hacer una pausa en la reproducción del disco.	• Para hacer una pausa de la reproducción o grabación de la cinta. • Para avanzar la reproducción un cuadro a la vez.
PLAY	• Para empezar la reproducción del disco.	• Para empezar la reproducción del disco.	• Para empezar la reproducción de la cinta.
POWER	• Para encender o apagar la unidad.	• Para encender o apagar la unidad.	• Para encender o apagar la unidad.
REC/OTR	—	—	• Para empezar una grabación o una grabación de un toque.
REPEAT	• Para reproducir repetidamente un capítulo o título.	• Para reproducir repetidamente una canción, grupo o disco. (MP3)	• Para activar/desactivar el modo de repetición.
RETURN	• Para volver a la operación previa en el menú.	• Para volver a la operación previa en el menú.	—
SEARCH MODE	• Para buscar un capítulo, título u hora. • Para colocar o buscar los marcadores.	• Para buscar una canción. • Para buscar el tiempo. (CD) • Para colocar o buscar los marcadores. (CD)	• Para llamar el menú de búsqueda de índice u hora.
SETUP	• Para llamar el menú de programación de DVD.	• Para llamar el menú de programación de DVD.	• Para llamar el menú de la grabadora de vídeo.
SKIP	• Para saltar capítulos o título.	• Para saltar canciones.	—
SPEED	—	—	• Para seleccionar la velocidad de grabación.
STOP	• Para parar la reproducción.	• Para parar la reproducción.	• Para parar la reproducción o grabación.
SUBTITLE	• Para seleccionar subtítulos en un disco.	—	—
TOP MENU	• Para llamar el menú superior en un disco.	• Para volver al archivo superior de la jerarquía más alta en el programa y en la lista de archivo. (MP3)	—
TRACKING	—	—	• Para ajustar manualmente el seguimiento durante la reproducción.
T-SET	—	—	• Para poner la grabadora de vídeo en el modo de espera para una grabación con temporizador.
VCR	—	—	• Para seleccionar el modo de salida de la grabadora de vídeo. • Para activar el modo de la grabadora de vídeo.
ZOOM	• Para ampliar parte de la imagen. (x2/x4)	—	—

# Quick Use Guide


## 1 Connections

Please refer to "Basic TV Connection" on the front page before you use this unit.

## 2 Installing the Batteries for the Remote Control



## 3 VCR/DVD Switching

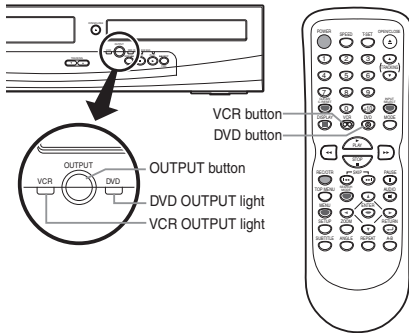

### VCR MODE

Press [VCR] on the remote control. (Verify that the VCR OUTPUT light illuminates.)

### DVD MODE

Press [DVD] on the remote control. (Verify that the DVD OUTPUT light illuminates.)

 
 
## 4 Turn on the Unit for the First Time




1 Be sure your TV's input is set to VIDEO (name may vary with TV manufacturer. See your TV manual for details.)



2 Select your language when turning this unit on for the first time. Then press [▶] to go to next step.



 
3 When "CLOCK SET" appears, go to step 2 in "Clock Setup" on this page.



## 5 Clock Setup




 1 Press [SETUP] and select "CLOCK SET". Then press [▶] to go to next step.




• If the clock is not set, the CLOCK SET screen appears when you press [SETUP]. In this case, go to step 2.

 
2 Select the current month. Then press [▶] to go to next step.



 
3 Select the current day. Then press [▶] to go to next step.



 
4 Select the current year. Then press [▶] to go to next step.




 
5 Select the current hour. Then press [▶] to go to next step.



 6 Select the current minute. Then press [▶] to go to next step.



7 Select "AM" or "PM".

  

8 To exit the CLOCK SET screen



# Quick Use Guide

## 6 VCR Playback

Before: Turn on the TV.



<p><b>1</b> Insert a video cassette into this unit.</p>	<p><b>2</b> To start playback</p>
<p><b>3</b> To stop playback</p>	<p><b>4</b> To eject the cassette</p>


## 7 DVD/CD Playback

Before: Turn on the TV, amplifier and any other components which are connected to this unit. Make sure the TV and audio receiver (not included) are set to the correct channel.



<p><b>1</b></p>	<p><b>2</b> Insert a disc with label facing up.</p>
<p><b>3</b> To start playback</p>	<p><b>4</b> To stop playback</p>

## 8 Remote Control

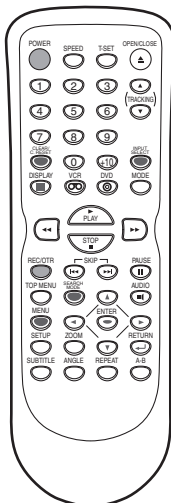

Button (Alphabetical order)	DVD mode		VCR mode
	DVD	CD MP3	VHS
1 2 3 4 5 6 7 8 9 0	•To select chapter or title directly.	•To select track directly.	—
◀ ▶	•To search forward/backward through a disc. •To begin slow forward/reverse playback in the pause mode.	•To search forward/backward through a disc.	•To forward/backward a tape.
A-B	•To repeat between your chosen point of A and B.	•To repeat between your chosen point of A and B. (CD)	—
ANGLE	•To select camera angles on a disc.	—	—
AUDIO	•To select audio languages on a disc.	•To select STEREO, L-ch or R-ch. (CD)	•To select the HIFI or MONO mode during playback at only HIFI tape.
CLEAR O RESET	•To clear the markers. •To clear numbers entered incorrectly. •To cancel the point for A-B repeat.	•To clear the markers. (CD) •To remove status number in program input. •To clear numbers entered incorrectly. •To cancel the point for A-B repeat. (CD)	•To exit the VCR Menu. •To reset the tape counter.
DISPLAY	•To display the current disc mode.	•To display the current disc mode.	•To display the current time, tape counter, and L1 or L2.
DVD	•To select DVD output mode. •To activate DVD mode.	•To select the DVD output mode. •To activate DVD mode.	—
ENTER	•To move the cursor and determine its position.	•To move the cursor and determine its position.	•To select an item on the VCR Menu. •To advance to the next VCR Menu. •To go back one step during clock and timer setting.
INPUT SELECT	—	—	•To select input L1 or L2.
MENU	•To call up the Menu on a disc.	•To call up the file list. (MP3)	—
MODE	•To set black level on/off. •To set virtual surround on/off.	•To arrange the playing order or play randomly. •To set virtual surround on/off.	—
OPEN/CLOSE	•To open or close the disc tray.	•To open or close the disc tray.	•To eject the video cassette from the VCR.
PAUSE	•To pause disc playback. •To advance playback one frame at a time.	•To pause disc playback.	•To pause tape playback or recording. •To advance playback one frame at a time.
▶	•To begin disc playback.	•To begin disc playback.	•To begin tape playback.
POWER	•To turn the unit on/off.	•To turn the unit on/off.	•To turn the unit on/off.
REC/OTR	—	—	•To start recording or One Touch Recording.
REPEAT	•To play a chapter or title repeatedly.	•To play a track or disc repeatedly. (MP3)	•To select the repeat mode on or off.
RETURN	•To return to the previous operation in menu.	•To return to the previous operation in menu.	—
SEARCH MODE	•To search chapter, title or time. •To set or search the markers.	•To search track. •To search time. (CD) •To set or search the markers. (CD)	•To call up the index or time search menu.
SETUP	•To call up the DVD setup menu.	•To call up the DVD setup menu.	•To call up the VCR Menu.
SKIP	•To skip chapters or titles.	•To skip tracks.	—
SPEED	—	—	•To select the recording speed.
STOP	•To stop playback.	•To stop playback.	•To stop playback or recording.
SUBTITLE	•To select subtitles on a disc.	—	—
TOP MENU	•To call up the Top Menu on a disc.	•To return to the top file of the highest hierarchy in the program and file list. (MP3)	—
TRACKING TRACKING	—	—	•To adjust the tracking manually during playback.
T-SET	—	—	•To put the VCR into standby mode for a Timer Recording.
VCR	—	—	•To select the VCR output mode. •To activate VCR mode.
ZOOM	•To magnify part of a picture. (x2/x4)	—	—